


2. LOCAL REMOTE CONTROLLER

2-4. Simple MA remote controller [PAC-YT53CRAU]

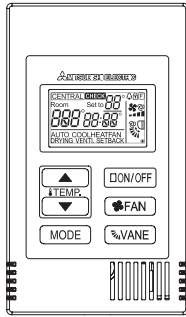

■ Functions ○:Single group operation ×:Not available

1. Operations/Display


Item	Setting	Display	Description
ON/OFF	○	○	Changes between ON and OFF.
Operation mode switching *2	○	○	Select from COOL, DRYING, FAN, AUTO, HEAT, and SETBACK.
Room temp. Setting *2	○	○	Sets a room temperature. * The extended set temperature range varies depending on operation mode, indoor unit, and connected systems. (The ranges for a standard model are as follows.) • COOL/DRYING: 19°C - 30°C/67°F - 87°F • HEAT: 4°C - 35°C/40°F - 95°F • AUTO: 19°C - 28°C/67°F - 83°F In AUTO (dual set point) mode, a room temperature will be maintained between the cooling preset temperature (upper limit) and heating preset temperature (lower limit).
Fan speed setting	○	○	Hi/Mid-2/Mid-1/Lo/Auto * Available fan speed settings vary depending on indoor unit.
Vane setting	○	○	Switches the vane directions. * Available vane direction settings vary depending on the indoor unit model.
Ventilation equipment control	○	○	When the City Multi indoor unit is connected, interlocked setting of the City Multi LOSSNAY unit is possible. When the Mr. Slim indoor unit (A-control) is connected, interlocked operation of the microcomputer-type LOSSNAY unit is possible.
Backlight	○	○	Pressing the button lights up a backlight. The light automatically turns off after a certain period of time. (The brightness settings can be selected from Bright, Dark, and Light off.)
Room temp. display	—	○	Displays a room temperature during operation.
Error information	—	○	Displays the current error status with the address. * The address may not be displayed depending on the error status.

*2 AUTO (dual set point) mode and SETBACK mode are settable only when those functions are available on the indoor unit.

2. Restriction settings

Item	Setting	Display	Description
Allows/disallows local operation	×	○	By setting a centralized controller, the following local operations are prohibited: ON/OFF; operation mode; preset temperature; fan speed; vane. * The CENTRAL icon appears while the local operations are prohibited.
Operation lock	○	○	Locks all buttons.
Temperature range restriction	○	○	The preset temperature range can be restricted for each operation mode (COOL/HEAT/AUTO).

■ System example

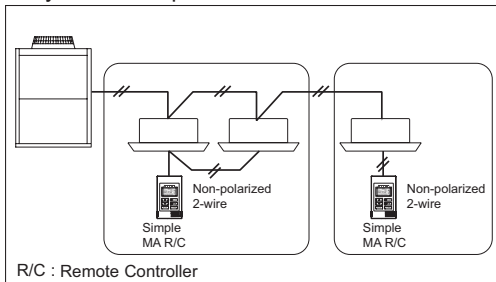

3. Miscellaneous

Item	Description
Room temperature detection	The temperature sensor is built-in on the remote controller.
Various settings	The following settings can be made by setting the dip switches. • Remote controller Main/Sub setting • Temperature display unit setting (Celsius/Fahrenheit) • Cooling/heating display in AUTO mode • Indoor temperature display

■ External dimension

